




### WHAT'S IN THE BOX

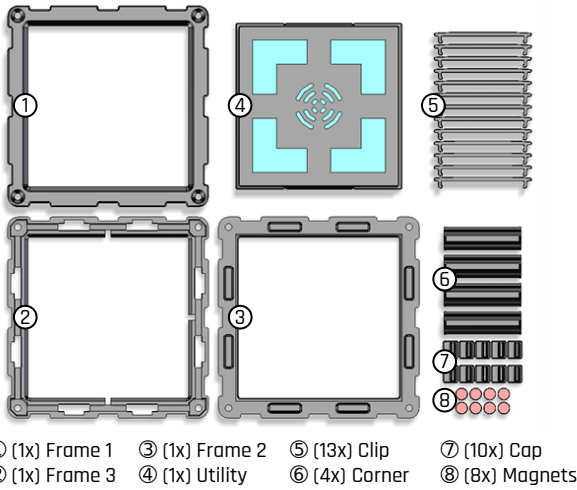


### 1 PREPARE YOUR PANELS

**Required for 1WH frame**  
⑨ (1x) Base Panel (82.8 x 82.8mm)  
⑩ (4x) Side Panel (37.3 x 83.8mm)

**Recommended thickness:**  
2.5 - 3.0 mm

**Compatible materials:**

- Wood
- Aluminium
- Acrylic
- Glass
- 3D Prints
- Cardboard

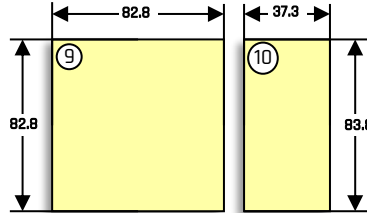


**Panels are optional.**  
You can create your own panels  
Or choose custom designs from **BLOKZ**

### 2 OPEN THE UTILITY BOX

Open the Utility Box ④  
and remove the parts you need.


The Utility Box  
is part of the **BLOKZ**  
system and can later  
be used as:

- Hidden storage compartment
- Base panel
- Inlay

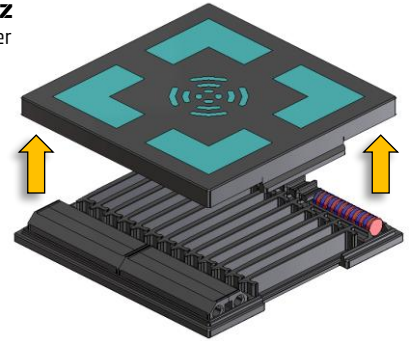

### 3 INSTALL THE BASE PANEL


Place the Base Panel ⑨ into the Bottom Frame ③.  
Snap the Middle Frame ② onto the Bottom Frame ③.

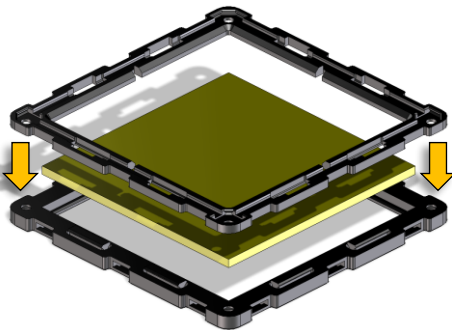

✓ Ensure both frames are fully engaged.


### 4 INSTALL CORNER PROFILES

Insert all Corner Profiles ⑥ into the Middle Frame ②.  
Push until fully seated.

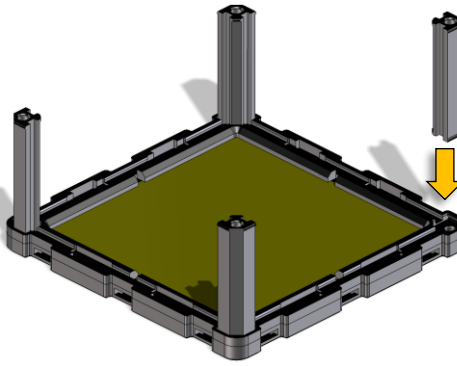


### 5 INSTALL THE SIDE PANELS

Slide the Side Panels ⑩ into the grooves of the Corner Profiles ⑥.

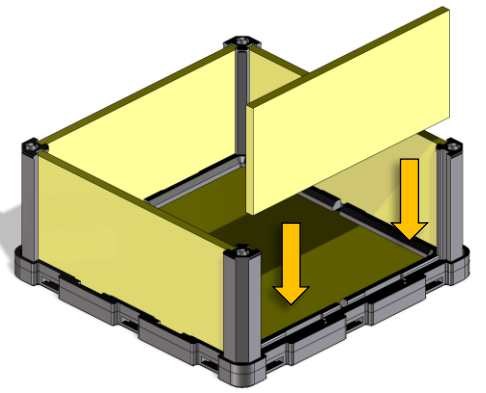


### 6 INSTALL THE TOP FRAME

Snap the top frame ① firmly on all corners ⑥ until you hear a **click**.

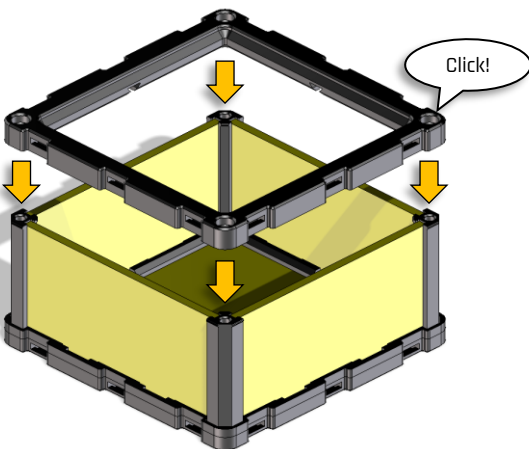


### 7 INSTALL FRAME CLIPS

**Minimum:** At least one clip ⑤ is required on each corner.  
**Recommended:** Additional clips increase stability.

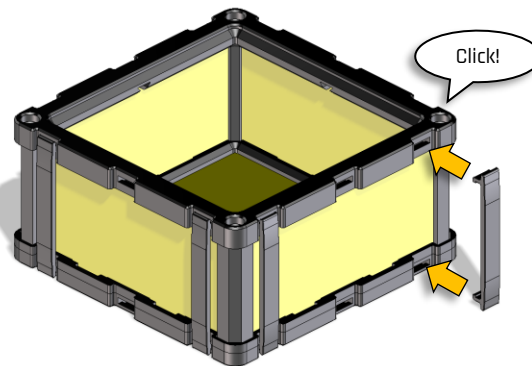

### 8 INSTALL MAGNETS


Insert the magnets ⑧ into the corner holes.  
Use the **BLOKZ** assembly helper  
to align magnets  
correctly.

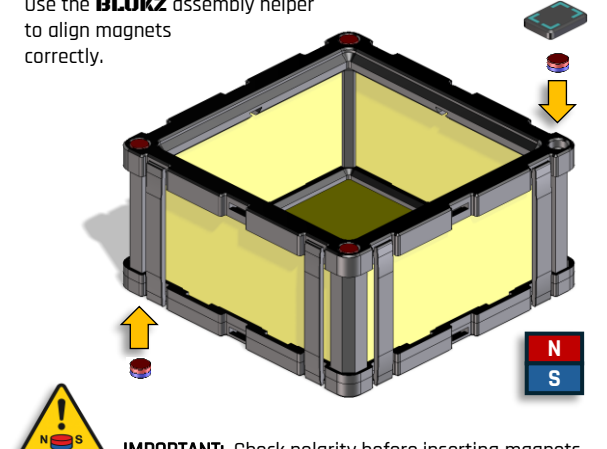

**IMPORTANT:** Check polarity before inserting magnets.


### 9 INSTALL COVER CAPS

Install Cover Caps ⑦ in all unused clip slots.

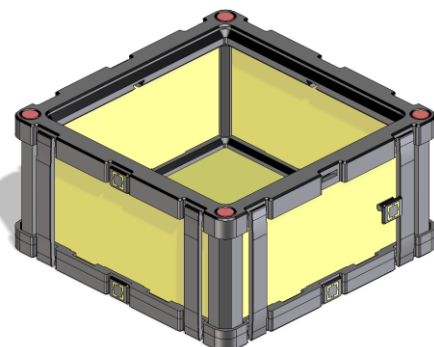

### 10 BUILD COMPLETE Your BLOKZ is ready.

What will you build?

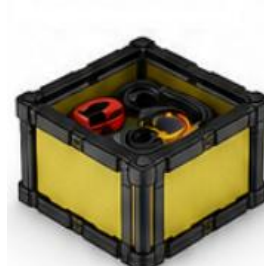

STORAGE



LIGHTNING



DISPLAY



ORGANIZATION



TAP THE NFC TAG FOR:



ASSEMBLY  
VIDEOS



CUSTOM  
PANELS



NEW  
CONFIGURATIONS



UPDATES  
& MORE